























Remote Functions Overview

BUTTON	ACTION	FUNCTION	NOTES
	Press and Hold (for 3 seconds)	Turn on / off the LEDs in all Zones.	<ul style="list-style-type: none"> When turned on, each of the LEDs will light up Green in ascending order. When turned off, the LEDs light up Red in descending order. Does not turn off the ExtremeController. Only the vehicle ignition switch (or rocker switch) can power off the controller. Refer to Zones, Modes, and Scenes: Scenes if you want to turn all of the LED lights off but still want Zones 3 and 4 to function as enhanced break, reverse, and turn signal lights.
	Short-Press	To enable EcoCast pairing.	<ul style="list-style-type: none"> The  Button on the ExtremeController has the same Action / Function.
	Short-Press	To turn on / off the Zone 1 LEDs.	<ul style="list-style-type: none"> When turned on, LEDs in Zone 1 will light up Green in ascending order. When turned off, the LEDs light up Red in descending order.
	Press and Hold (for 3 seconds)	To select Zone 1.	<ul style="list-style-type: none"> The LEDs in Zone 1 will flash Green twice, indicating that the (Bright, Speed, and Color) Common Buttons will only apply to Zone 1.
	Short-Press	To turn on / off the Zone 2 LEDs.	<ul style="list-style-type: none"> When turned on, LEDs in Zone 2 will light up Green in ascending order. When turned off, the LEDs light up Red in descending order.
	Press and Hold (for 3 seconds)	To select Zone 2.	<ul style="list-style-type: none"> The LEDs in Zone 2 will flash Green twice, indicating that the (Bright, Speed, and Color) Common Buttons will only apply to Zone 2.
	Short-Press	To turn on / off the Zone 3 LEDs.	<ul style="list-style-type: none"> When turned on, LEDs in Zone 3 will light up Green in ascending order. When turned off, the LEDs light up Red in descending order.
	Press and Hold (for 3 seconds)	To select Zone 3.	<ul style="list-style-type: none"> The LEDs in Zone 3 will flash Green twice, indicating that the (Bright, Speed, and Color) Common Buttons will only apply to Zone 3.
	Short-Press	To turn on / off the Zone 4 LEDs.	<ul style="list-style-type: none"> When turned on, LEDs in Zone 4 will light up Green in ascending order. When turned off, the LEDs light up Red in descending order.
	Press and Hold (for 3 seconds)	To select Zone 4.	<ul style="list-style-type: none"> The LEDs in Zone 4 will flash Green twice, indicating that the (Bright, Speed, and Color) Common Buttons will only apply to Zone 4.

BUTTON	ACTION	FUNCTION	NOTES
Z1-M	Short-Press	To cycle through the three LED Mode categories for Zone 1.	
Z2-M	Short-Press	To cycle through the three LED Mode categories for Zone 2.	
Z3-M	Short-Press	To cycle through the three LED Mode categories for Zone 3.	
Z4-M	Short-Press	To cycle through the three LED Mode categories for Zone 4.	
MODE	Short-Press	To cycle through the three LED Mode categories for all the Zones.	<ul style="list-style-type: none"> There are 42 distinct LED Modes: 8 Color Modes, 18 Party Modes, and 16 Music Sync Modes. You can also use the SoundExtreme Smartphone App to find a specific LED Mode.
	Press and Hold (for 3 seconds)	To enter Pairing Mode with the ExtremeController.	<ul style="list-style-type: none"> The RF Remote Control comes paired to the ExtremeController. This feature is meant to be used if the connection is lost or a replacement Remote is purchased.
BRIGHT	Short-Press	To cycle through 5 levels of Brightness for all the Zones.	
	Press and Hold (for 2 seconds)	To cycle through 5 levels of Brightness for the selected Zone.	<ul style="list-style-type: none"> This feature is only available when one of the Zones has been selected via one of the Zone Buttons. (Press and hold Z1, Z2, Z3, or Z4 for 3 seconds).
SPEED	Short-Press	To cycle through 5 levels of Speed for all the Zones.	
	Press and Hold (for 2 seconds)	To cycle through 5 levels of Speed for the selected Zone.	<ul style="list-style-type: none"> This feature is only available when one of the Zones has been selected via one of the Zone Buttons. (Press and hold Z1, Z2, Z3, or Z4 for 3 seconds).
SCENE	Short-Press	To cycle through the 5 defined Scenes for all the Zones.	<ul style="list-style-type: none"> Scene 6 (Street Mode) turns all the LED lights off but Zones 3 and 4 will still function as enhanced break, reverse, and turn signal lights.
	Press and Hold (for 3 seconds)	To set all Zones to shine Orange, at 100% brightness and 80% speed.	

BUTTON	ACTION	FUNCTION	NOTES
   	Short-Press	To select the corresponding Color for all the Zones.	<ul style="list-style-type: none"> There are 8 Color Buttons on the Remote Control: Red, Green, Blue, White, Orange, Yellow, Cyan, and Purple. You can also use the SoundExtreme Smartphone App create a custom color.
   	Press and Hold (for 2 seconds)	To select the corresponding Color for the selected Zone.	<ul style="list-style-type: none"> This feature is only available when one of the Zones has been selected via one of the Zone Buttons. (Press and hold Z1, Z2, Z3, or Z4 for 3 seconds).

BUTTON	ACTION	FUNCTION	NOTES
   	Short-Press	To select the corresponding Color for all the Zones.	<ul style="list-style-type: none"> There are 8 Color Buttons on the Remote Control: Red, Green, Blue, White, Orange, Yellow, Cyan, and Purple. You can also use the SoundExtreme Smartphone App create a custom color.
   	Press and Hold (for 2 seconds)	To select the corresponding Color for the selected Zone.	<ul style="list-style-type: none"> This feature is only available when one of the Zones has been selected via one of the Zone Buttons. (Press and hold Z1, Z2, Z3, or Z4 for 3 seconds).