

BUTTON	ACTION	FUNCTION	NOTES
	Short-Press	To turn on / off the Amplified speaker.	<ul style="list-style-type: none"> <li>· If the Amplifier Tower Speaker is controlled by the vehicle ignition, when the ignition is on, the Remote can turn the Amplified Tower Speaker off or on. When the ignition is off, the Power Button does not turn the speaker on or off.</li> <li>· If the Amplified Tower Speaker is powered by a removable and rechargeable Battery Pack, and the speaker is turned off, pressing the Power Button will <b>NOT</b> turn on the speaker (infrared remote control is turned off to save battery power when a battery-powered speaker is turned off). You have to press the Power Button on the speaker to turn it on.</li> </ul>
	Short-Press	To play / pause audio.	
	Short-Press	<ul style="list-style-type: none"> <li>· In Bluetooth Mode: To skip to the previous or the next track.</li> <li>· In FM Mode: To tune in a station.</li> </ul>	
	Press and Hold (for 3 seconds)	In FM Mode: To seek a strong station.	
	Short-Press	To Change Modes.	<ul style="list-style-type: none"> <li>· The Mode LED Status Indicator will change color to indicate the current Mode: Blue – Speaker Mode; Red – EcoCast Transmitting; Green – EcoCast Receiving; White – FM</li> </ul>
	Press and Hold (for 3 seconds)	To enable EcoCast pairing.	
	Short-Press	To increase or decrease the speaker's volume.	
	Press and Hold Both (for 3 seconds)	To change the Left and Right Audio Channel settings for the speaker.	<ul style="list-style-type: none"> <li>· Each <b>Press and Hold</b> will cycle through Left, Right, and Mono.</li> </ul>

BUTTON	ACTION	NOTES
	<b>Short-Press</b> To turn on / off Zone 1 (Party Lights).	· When turned on, LEDs in Zone 1 will light up Green in ascending order. When turned off, the LEDs light up Red in descending order.
	<b>Short-Press</b> To turn on / off Zone 2 (Dome Light).	
	<b>NOT APPLICABLE FOR THIS PRODUCT</b>	
	<b>Short-Press</b> To cycle through the three LED Mode categories for Zone 1.	· There are 44 distinct LED Modes: 8 Color Modes, 20 Party Modes, and 16 Music Modes. You can also use the SoundExtreme Smartphone App to find a specific LED Mode.
	<b>Double-Click</b> To cycle back to the previous LED Mode for Zone 1.	
	<b>Short-Press</b> To cycle through the three Brightness levels for Zone 2.	
	<b>Double-Click</b> To cycle back to the previous Brightness level for Zone 2.	
	<b>NOT APPLICABLE FOR THIS PRODUCT</b>	
	<b>Short-Press</b> To cycle through the three LED Mode categories for Zone 1.	· There are 44 distinct LED Modes: 8 Color Modes, 20 Party Modes, and 16 Music Modes. You can also use the SoundExtreme Smartphone App to find a specific LED Mode.
	<b>Double-Click</b> To cycle back to the previous LED Mode for Zone 1.	

BUTTON	ACTION	FUNCTION	NOTES
	<b>Short-Press</b>	To cycle through the 5 defined Scenes for Zone 1.	
	<b>Short-Press</b>	To cycle through 5 levels of Brightness for Zone 1.	
	<b>Short-Press</b>	To cycle through 5 levels of Speed for Zone 1.	
	<b>Short-Press</b>	To select the corresponding Color for Zone 1.	<ul style="list-style-type: none"> <li>There are 8 Color Buttons on the Remote Control: Red, Green, Blue, White, Orange, Yellow, Cyan, and Purple. You can also use the SoundExtreme Smartphone App create a custom color.</li> </ul>
	<b>Press and Hold</b> (for 3 seconds)	To select a speaker to control.	<ul style="list-style-type: none"> <li>Refer to Select a <b>Speaker to Control</b> for more details.</li> </ul>
	<b>Press and Hold</b> (for 3 seconds)	When in FM Mode: To save the current station to the P1 Button.	<ul style="list-style-type: none"> <li>Refer to Select a <b>Speaker to Control</b> for more functions.</li> </ul>
	<b>Short-Press</b>	When in FM Mode: To tune to the station saved to the P1 Button	
	<b>Press and Hold</b> (for 3 seconds)	When in FM Mode: To save the current station to the P2 Button.	<ul style="list-style-type: none"> <li>Refer to Select a <b>Speaker to Control</b> for more functions.</li> </ul>
	<b>Short-Press</b>	When in FM Mode: To tune to the station saved to the P2 Button	
	<b>Press and Hold</b> (for 3 seconds)	When in FM Mode: To save the current station to the P3 Button.	<ul style="list-style-type: none"> <li>Refer to Select a <b>Speaker to Control</b> for more functions.</li> </ul>
	<b>Short-Press</b>	When in FM Mode: To tune to the station saved to the P3 Button	