



Below are the infrared remote control commands in standard NEC format for the GDI-BTAR122 and GDI-BTAR502.

<u>First:</u>	<u>Command</u>	
REMOTE_CODE	0xFE01	
<u>Second:</u>	<u>Command</u>	<u>Comment</u>
REMOTE_Standby	0xFF00	Takes unit in and out of standby
REMOTE_BT	0xFE01	Changes to BT audio input and pairing
REMOTE_AUXIN	0xF20D	Selects aux in audio input
REMOTE_VOLUP	0xF50A	Increases audio volume
REMOTE_VOLDOWN	0xF808	Decreases audio volume
REMOTE_Mute	0xFD02	Mutes the audio output
REMOTE_Play	0xFA05	Play current BT connection
REMOTE_FW	0xFB04	Play next track
REMOTE_RW	0xF906	Play previous track
REMOTE_TRUP	0xF30C	Increases treble setting
REMOTE_TRDOWN	0xEF10	Decreases treble setting
REMOTE_BassUP	0xF10E	Increases bass setting
REMOTE_BassDOWN	0xED12	Decreases bass setting
REMOTE_FLAT	0xEE11	Sets equalizer to suggested factory setting
REMOTE_JAZZ	0xEB14	Sets equalizer to Jazz setting
REMOTE_RandB	0xEA15	Sets equalizer to R and B setting
REMOTE_ROCK	0xE916	Sets equalizer to rock setting
REMOTE_DEFAULT	0xF609	Resets device memory