

# PLEASE READ BEFORE UNBOXING

---

**BEFORE** you start unpacking your Extreme Tower Speakers, **PLEASE READ** this Hardware Guide, then read the Extreme Tower Speakers Installation and User Guides.



Extreme Tower TB8 | Models: SEI-ETBAT7700...20

## 8 inch Tower Speakers Hardware Guide

**1** Bluetooth Amplified Tower Speaker


**1** Battery + **1** Passive Tower Speaker

# Hardware Guide

## ExtremeTower Packaging Layout

Mounting parts and tools are in the top level and the cables are located in the bottom level of the protective foam packaging.

### Top Level: Mounting Parts and Tools

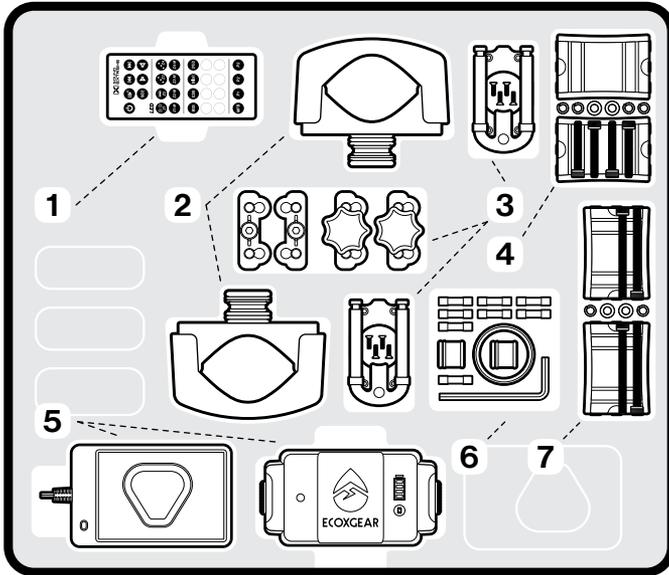

1. **Remote Control** (1 pc)

2. **Clamps**

- Clamps - Top & Bottom (2 sets)

3. **Locking Harness Sets**

- Locking Screw Latches (2 pcs)
- Quick Release Knobs (2 pcs)
- U-Shaped Pins (2 pcs)
- Base Cover Plates (2 pcs)
- M3 x 10 Screws (8 pcs)

4. **Thick Rubber Insert & Bolt Sets**

- Thick Rubber Inserts (2 pcs)
- Short Mounting Bolts (4 pcs)
- Anti-Loose Spring Washers (4 pcs)
- Flat Washers (4 pcs)

5. **Battery Pack Set**

- Battery Pack (1 pc)
- Battery Wall Charger (1 pc)


## 6. Mounting Tools

- Allen Wrench (1 pc)
- Electrical Tape (1 pc)
- Heat-Shrink Tubing (6 pcs)
- Insulated BUTT Connectors - Blue (3 pcs) & Red (6 pcs)
- 4-Pin Deutsch Rubber Plug (1 pc)

## 7. Thin Rubber Insert & Bolt Sets

- Thin Rubber Inserts (2 pcs)
- Long Mounting Bolts (4 pcs)
- Anti-Loose Spring Washers (4 pcs)
- Flat Washers (4 pcs)

## Bottom Level: Speakers and Cables

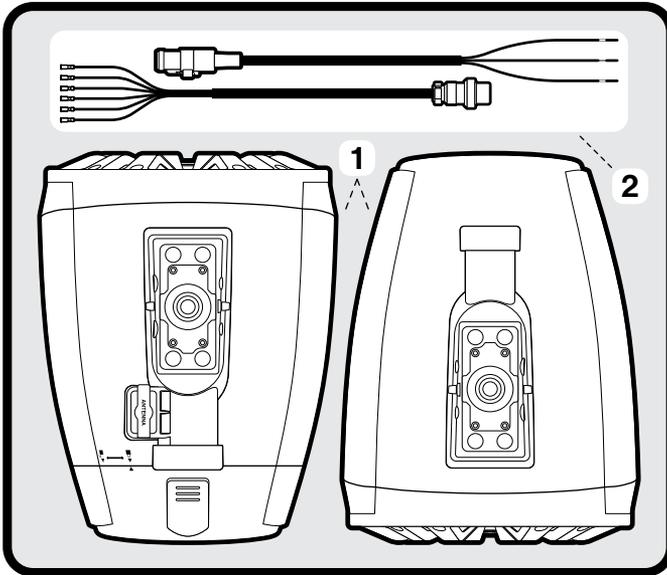

### 1. Speakers

- ExtremeTower Speakers (2 pcs)
- Aviation Connector Caps (2 pcs)

### 2. Cable Sets

- Aviation Cable Sets (2 pcs)
- Deutsch Cable Sets (2 pcs)
- Power Extension Cable (1 pc)
- Remote Turn-On Extension Cable (1 pc)

# Hardware Guide

---

The Extreme Tower TB8 Set includes two different types of speakers:

1. One Passive Speaker.
2. One Amplified Speaker with built-in amplifier and LEDCast LED controller, which powers and controls the LED Party Lights on both speakers.


**Important:** Do **NOT** connect this product to any other manufacturers' LED controller. Connecting this product to any other manufacturer's product may cause permanent damage to the product and shall **VOID THE PRODUCT WARRANTY**.

**BEFORE** you start your installations please **READ** the following options for power connections, wiring, and mounting.

## Amplified Tower Speaker Power Connection Options

There are two power options for the Amplified Tower Speaker:

1. Connect to your vehicle's battery.
2. Use a removable and rechargeable Battery Pack. The Battery Pack can be removed from the speaker and charged via the Charger or left installed in the speaker and be charged by your vehicle's battery / power. The speaker's battery will only be charged by the vehicle when your vehicle is switched and powered on. When your vehicle is switched off, the speaker will only use the battery charge of the integrated battery and will **NOT** drain power from your vehicle's battery.

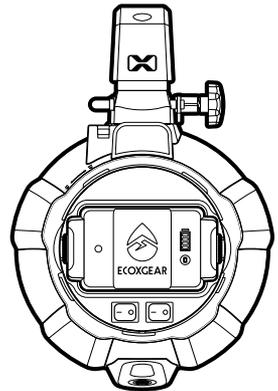


## Speaker Power and Signal Wiring Cable Options

There are two power and signal connection jacks on the speakers:

Deutsch Connector Jack

Aviation Connector Jack

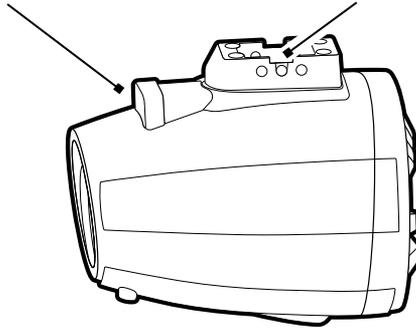


1. A round Aviation Connector Jack is inside the speaker's Base-Mount.
  2. A square Deutsch Connector Jack is behind the speaker's Base-Mount, behind a rubber cap.
- The Amplified Extreme Tower Speaker has two Deutsch Connector Jacks.

Your speakers include two Cable sets.

### IMPORTANT


1. An Aviation Connector Jack Cover Cap is attached to the Base-Mount on the speaker.

If you choose to use the Deutsch Cable Set for wiring, before installation, you **MUST** screw the cap into the connector jack on the speaker, tightening it clockwise with a long nose plier (not included) or similar tool. Failing to do this will result in potential water or moisture penetration into the jack connector pins, causing damage to the speaker and **VOIDING THE PRODUCT WARRANTY.**

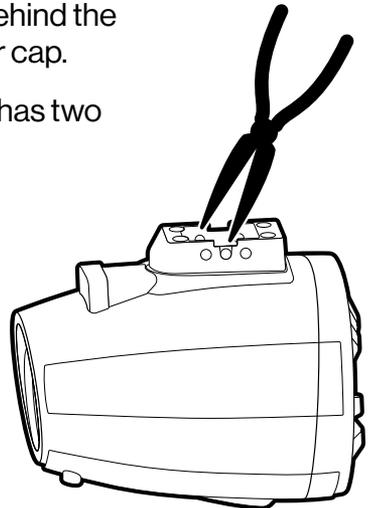

# Hardware Guide

2. Only **ONE** set of cables (Aviation or Deutsch) can be used at a time. Do **NOT** wire the speakers with **BOTH** the Aviation Cables and Deutsch Cables.

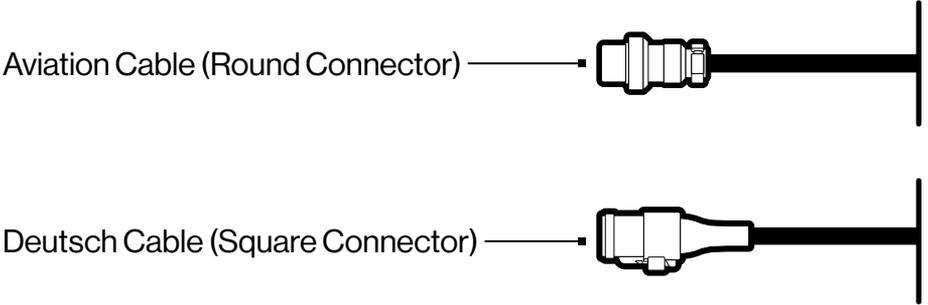


CABLE SET	CABLE USE	SET INCLUDES
<b>Aviation Cable Set</b> (Round Connector)	This cable set is used for the speaker installation which requires the cable to pass through the Bottom Mount Clamp and go into a hole in the crossbar at the spot where the speaker is mounted.	<ul style="list-style-type: none"><li>· “Round A1” 9-Pin to 6-Pin Pass-Through LED and Speaker Aviation Cable.</li><li>· “Round A2” 6-Pin Pass-Through Aviation Cable.</li></ul>
<b>Deutsch Cable Set</b> (Square Connector)	This cable set is used for the speaker installation which does <b>NOT</b> require the cable to pass the Bottom Mount Clamp and go into a hole in the crossbar at the spot where the speaker is mounted.	<ul style="list-style-type: none"><li>· “Deutsch A1” 4-pin Power Cable.</li><li>· “Deutsch A2” 6-Pin Interconnection Cable.</li></ul>

## Mounting Options

1. Rubber Inserts — The Rubber Inserts are included to allow for best fit on different bar sizes. Your speakers include two Rubber Insert sets:

RUBBER SET	RUBBER USE	SET INCLUDES
<b>Rubber Insert Set</b> (Thin)	Fit 2.5" to 3.0" bar size.	<ul style="list-style-type: none"><li>· Thin rubber inserts.</li><li>· Long mounting bolts, anti-loose spring washers, flat washers.</li></ul>
<b>Rubber Insert Set</b> (Thick)	Fit 1.5" to 2.5" bar size.	<ul style="list-style-type: none"><li>· Thick rubber inserts.</li><li>· Short mounting bolts, anti-loose spring washers, flat washers.</li></ul>


2. Locking Harness — The Locking Harness is included to lock both the U-shaped Pin and the Swivel Flange on the Bottom Clamp Assembly. There are two different Locking Screw Latches for you to select from:

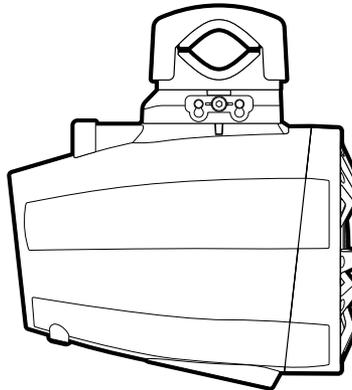

- Locking Screw Latch with a Hex Nut – It is necessary to use an Allen wrench (included) to tighten or untighten the latch.

# Hardware Guide

---

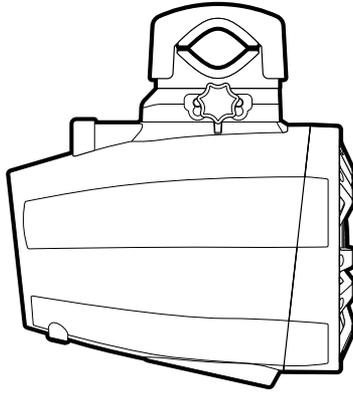

- Locking Screw Latch with a Quick-Release Knob – A tool is **NOT** required to tighten or untighten the latch.

This option is more convenient to mount and unmount your speaker for portable use or theft deterrence. It is suggested that you use the rear Deutsch Connection Cable option with the Quick Release Knob as the round Aviation Cable option is difficult to connect and disconnect multiple times.

**AFTER** you read this Hardware Guide and locate **ALL** the included accessories packaged in the box, please follow the steps in the ExtremeTower Speakers Installation Guide and User Guide.



 **SOUNDEXTRME**  
BY ECOXGEAR